

LeakAlertor® Wireless PRO

On the day of installation; be sure to have the PRO Gateway installed and, that it is communicating properly *before starting any Node installations*. Contact a member of the Install Support Team if you have any questions. They are available Monday through Friday 9:00 AM to 6:00 PM Eastern time.

Confirm you are installing each Node in the correct location by checking the Serial Number and Location on the installation spreadsheet located inside the shipping box.

FAQ's

Does it matter which Node I install on the toilet?

Yes! Each Node is pre-assigned to a specific toilet so when there's a problem with that toilet, it's identified properly on the Dashboard. Always double check the information on the installation spreadsheet matches the serial number on the Node and the toilet location. Be especially careful when an apartment/room has more than one toilet. Each is separately identified.

Is the pattern the LEDs flash important?

Yes, especially during installation. The flash pattern will tell you if the Node is in communication with the Gateway. You are looking for: a long **Green** – quick **Red/Green/Blue** – steady **Blue** flash pattern. If you have a **Red/Green - Red/Green** pattern, then Node is not communicating with the Gateway. You should stop installing additional Nodes and contact the Install Support Team at (877) 532-5253.

(See the Node Installation video under the Support Tab on the website for reference)

What should I do after installing the Node in the tank?

Simply put the lid back on the toilet, replace any items that were on the toilet lid first, **then flush the toilet** and leave the bathroom. Everything else is automatic.

What should I do if a ballcock is being used in the toilet?

Before installing the Node replace the ballcock. Often times when a ballcock is being used there's not enough room in the tank to place the Node correctly. We recommend using a Fluid Master 400 series fill valve.


What happens if I accidentally scrape the sensor wire against the inside of the tank?

We understand some installs have very little room to place the unit inside the tank. If the sensors are scraped, complete the installation and check with the Install Support Team to confirm if any damage was done to the sensors. If the sensor is damaged, additional sensors are included in your shipment. You can also contact the Install Support Team to give any further instructions.



Remotely Detecting the Undetectable

LeakAlertor® Wireless PRO Node Installation Guide

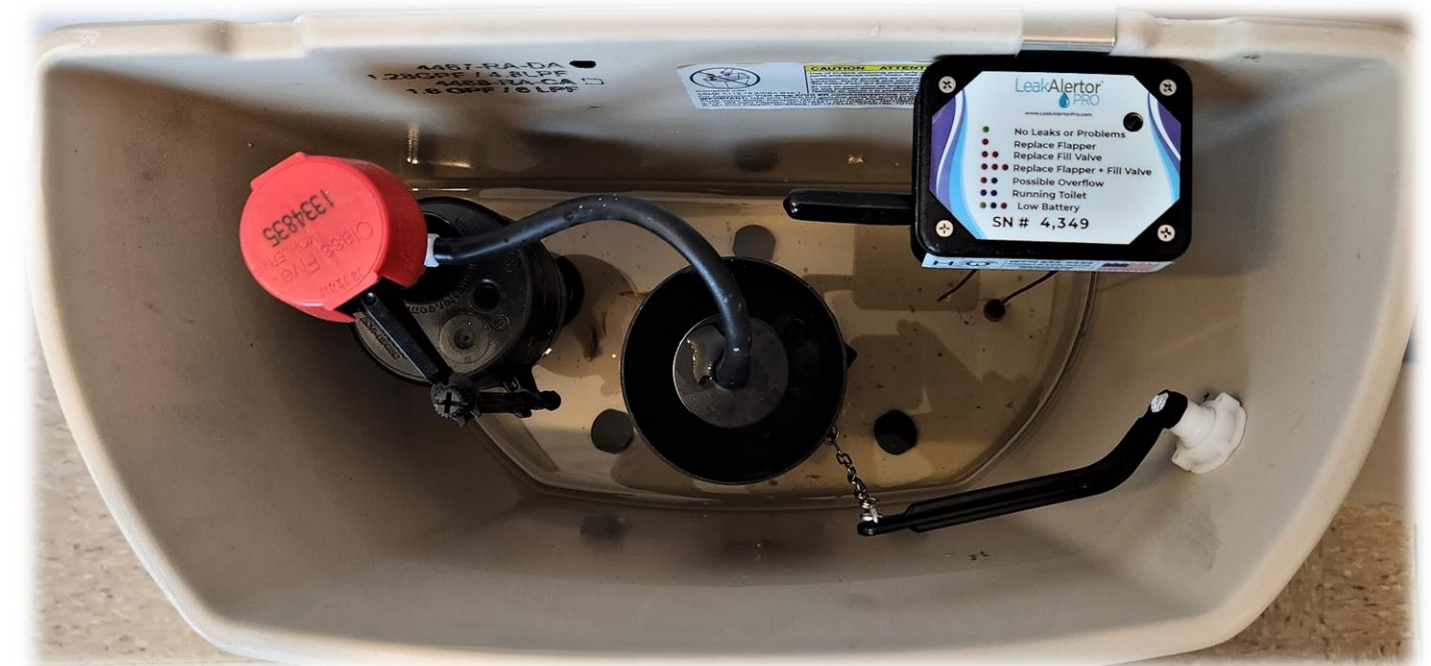


H2O Connected, LLC
190 West Lincoln Highway
Coatesville, PA 19320

www.LeakAlertor.com
(877) 532-5253



© 2023 H2O Connected, LLC PRO NDIG (FEB 23)

LeakAlertor® Wireless PRO Installation Guide

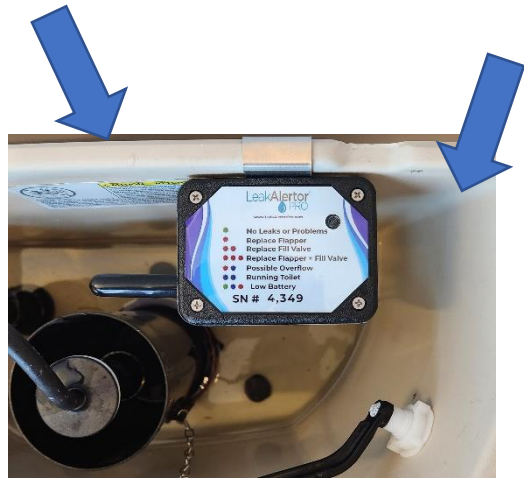

LOCATION OF NODE

Place along the back or side of the tank. In all cases, keep sensors away from the tank walls, flapper, overflow tube, etc. and ensure sensor does not interfere with operation of the toilet.

WARNING:

Take care not to scratch, nick or damage the red sensor wires. Doing so can cause the unit to fail and require a return to the factory for replacement or repair.

NOTE REGARDING BALLCOCKS:

Due to the limited amount of space in some tank models when a ballcock is being used, we recommend replacing the ballcock with a fill valve, prior to Node installation.

①
Lift Lid



②
Thread the Sensors into the Node. First the Black Sensor then the Red Sensor. There should be no gap between the Sensor nut and the cup.



"Finger-Tighten" Only

DON'T Overtighten

③
Hang Unit on Tank Rim



④
Replace lid on the tank, flush the toilet.



SCAN ME

Scan QR code for a link to the Installation Video